


 Do you need
more help?

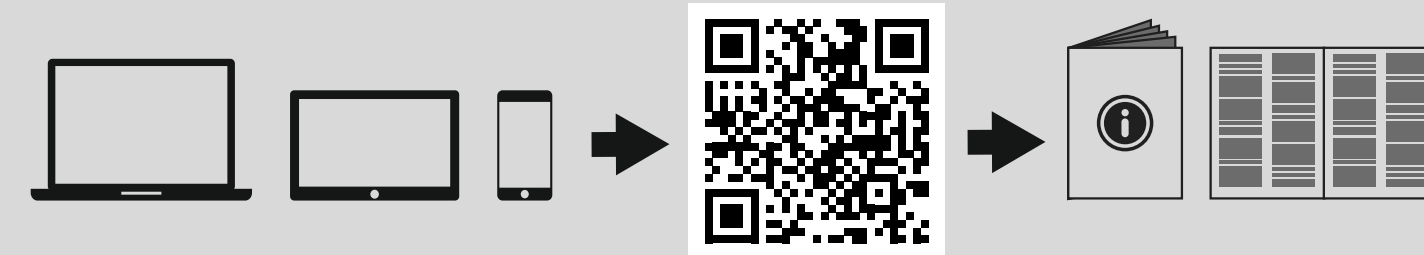

Scan QR or visit: support.hama.com/00108770

We are so happy you chose a
hama product.

Enjoy using it!



Raccolta Carta









hama







00
108770

Quick Installation Guide

Required tools





Installation kit



A1		8x70 (x4)	D1		M8x12 (x4)
A2		Ø10x60 (x4)	D2		M8x20 (x4)
A3		M8 (x4)	D3		M8x30 (x4)
B1		M6 (x4)	D4		M8x50 (x4)
B2		Ø8x10 (x4)	E1		M4x12 (x4)
B3		Ø8x20 (x4)	E2		M4x20 (x4)
C1		M6x12 (x4)	F1		(x1)
C2		M6x20 (x4)			





1 Drilling the holes

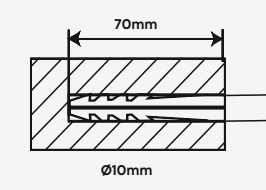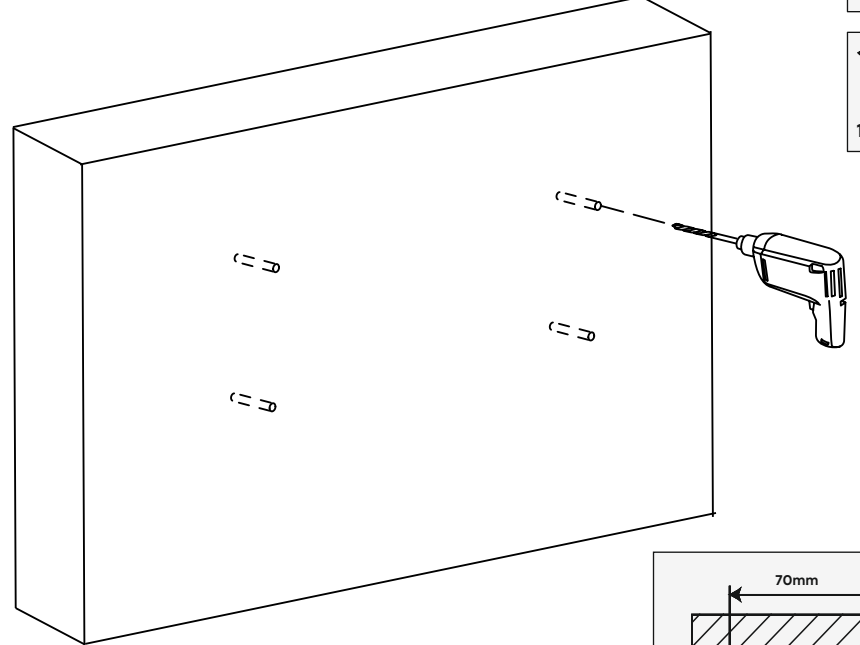

2 Wall mounting the bracket

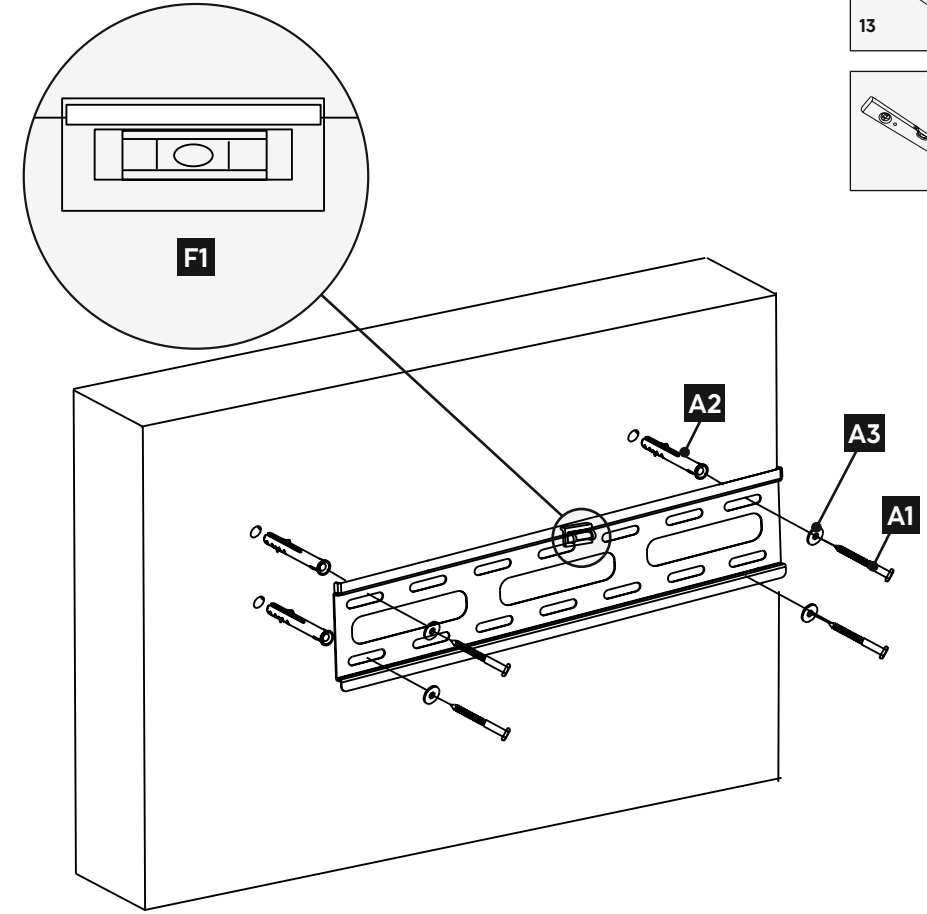

3 Mounting on backside of the TV



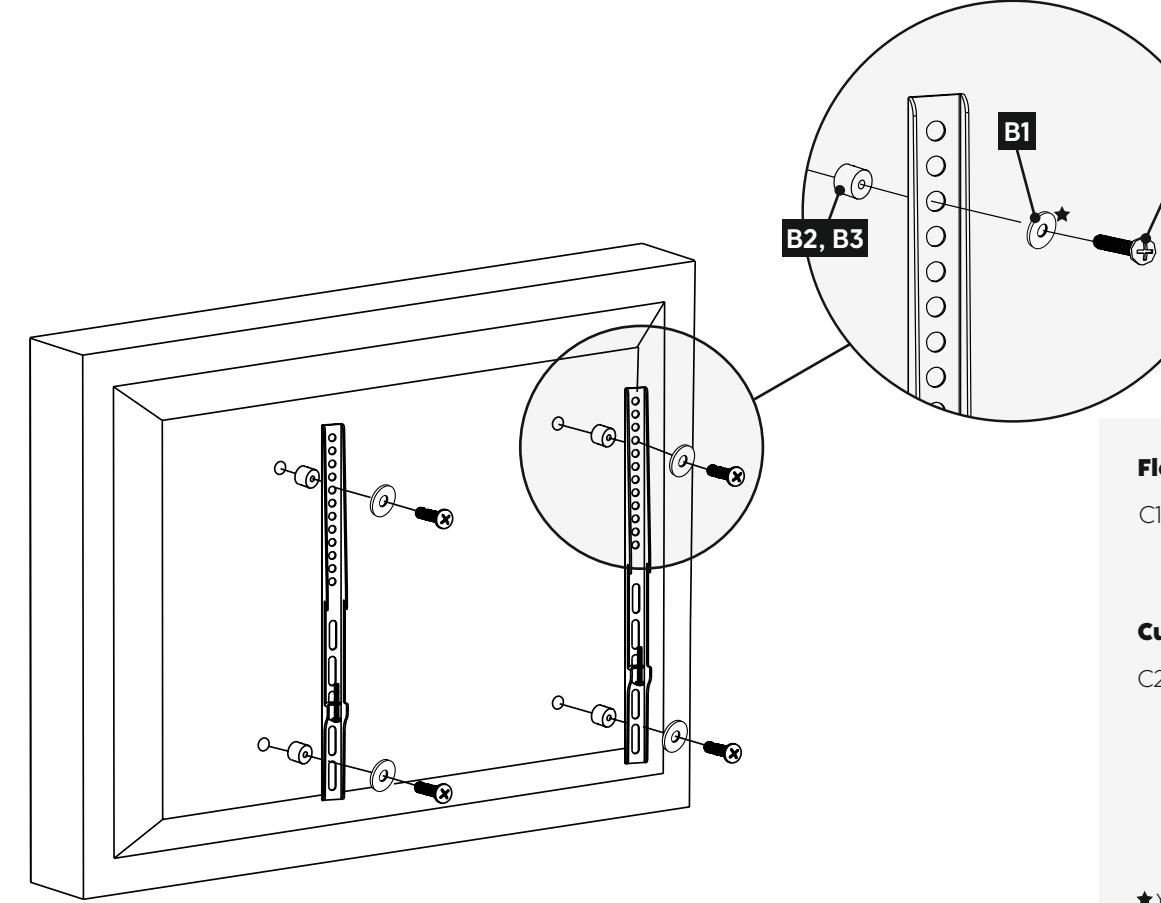


Flat TV backside
C1, D1, D4, E1 + B1

Curved TV backside
C2, D2, D4, E2 + B1 + B2

D3, D4 + B3

M8x50 + Ø8x5 = M8x45 (D4)



★ You do not need a washer for the D-screws

4 Adjustment & Fixing

